

GOING FUTURE TODAY.



HVB 22
HVB 31
HVB 32
Broadband amplifiers



Operating manual

Before operating the device

HINWEIS: *Read this operating manual through carefully! It contains important information about installation, ambient conditions and maintenance of the device. Keep this operating manual for future use and for handover in the event of a change of owner or operator. A PDF version of this manual can be downloaded on the ASTRO website (there may be a more recent version).*

The ASTRO company confirms that the information in this manual was correct at the time of printing, but it reserves the right to make changes to the specifications, the operation of the device and the operating manual without prior notice.



Contents

Symbols and conventions used.....	page 04
Intended use.....	page 05
Intended audience for this manual.....	page 05
Device description.....	page 06
Important safety information.....	page 08
Warranty conditions.....	page 12
Performance description.....	page 12
Disposal.....	page 12
Installation.....	page 13
Connection and start-up.....	page 14
Configuration.....	page 14
Troubleshooting.....	page 16
Maintenance and repair.....	page 16
Block diagram.....	page 17
Technical data.....	page 18

Symbols and conventions used

Symbols used in this manual

Pictograms are visual symbols with specific meanings. You will encounter the following pictograms in this installation and operating manual:



Warning about situations in which electrical voltage and non-observance of the instructions in this manual pose a risk of fatal injuries.



Warning about various dangers to health, the environment and material.



Warning about thermal dangers due to hot surfaces.



Recycling symbol: indicates components or packaging materials which can be recycled (cardboard, inserts, plastic film and bags). Used batteries must be disposed of at approved recycling points. Batteries must be completely discharged before disposal.



This symbol indicates components which must not be disposed of with household rubbish.

Intended use

The HVB 22, HVB 31 and HVB 32 are universal broadband amplifiers for bidirectional building distribution and broadband communication systems. They are exclusively designed for signal amplification in unidirectional and bidirectional distribution systems in single-family and multi-family dwellings.

Modification of the devices or use for any other purpose is not permitted and will immediately void any guarantee provided by the manufacturer.

Intended audience for this manual

Installation, configuration and start-up

ASTRO amplifiers are intended to be installed and put into operation by qualified experts who have training which enables them to perform the work required by EN 60728-11 and EN 62368-1. Unqualified persons are not permitted to install and operate the device.



Device description

The device packaging contains the following:

- HVB 22, HVB 31 or HVB 32 building broadband amplifier
- Jumper for device configuration (pre-assembled)
- 2 screws and wall plugs
- Wire ferrule
- Operating manual

- [1] Power cable
- [2] Screw
- [3] Power indicator
- [4] Drill holes for supplied screws (wall installation)
- [5] Installation lugs for perforated plate or wooden plate
- [6] Bushing for earth connection



Fig. 1: HVB 31 amplifier (HVB 22 and HVB 32 identical)

- [1] Forward path attenuator
- [2] Forward path equaliser
- [3] Forward path interstage slope, pluggable
- [4] Return path attenuator
- [5] Output
- [6] Input
- [7] Clamping screw for earth connection
- [8] Installation lugs for perforated plate

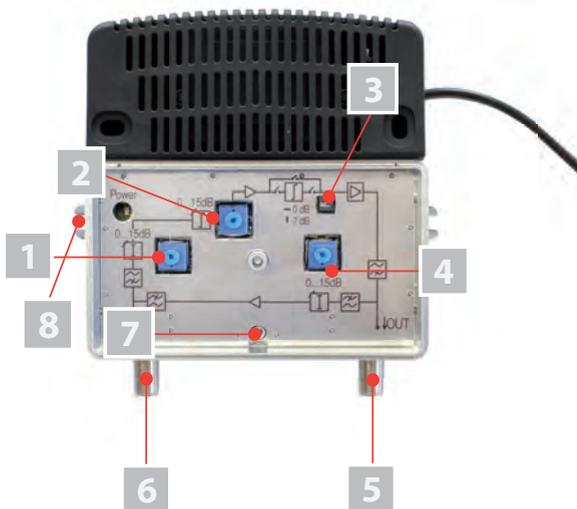


Fig. 2: HVB 31 amplifier, interior view



The HVB 22, HVB 31 and HVB 32 amplifiers have a CE-marking. This confirms that the products comply with the relevant EC directives and adhere to the requirements specified therein.



Important safety information

To avoid any potential risks to the greatest extent possible, you must observe the following safety information:

ACHTUNG: *Failure to observe this safety information may result in physical injury due to electrical and thermal dangers!*

Intended use

- Only use the device at approved operating sites and under approved ambient conditions (as described in the following), and only for the purpose described in the section "Proper use".

Before operating the device

HINWEIS: *Read this operating manual through carefully! It contains important information about installation, ambient conditions and maintenance of the device. Keep this operating manual for future use and for handover in the event of a change of owner or operator. A PDF version of this manual can be downloaded on the ASTRO website (there may be a more recent version).*

- Check the packaging and the device for transport damage immediately. Do not operate a device that has been damaged.
- Carrying the device by the power cable may damage the power cable or the strain relief and is therefore not permitted.

Installation and operation

- The device may only be installed and operated by qualified persons (in accordance with EN 62368-1) or by persons who have been instructed by qualified persons. Maintenance work may only be carried out by qualified service personnel.
- An installation site must be provided that prevents children from playing with the device and its connections.
- The electrical connection conditions must correspond to the specifications on the device type plate.



- To avoid damage due to overheating, the device may only be installed on vertical surfaces. The connection for the power supply unit must point to the right. The installation basis should be level and non-flammable. Operating position: Device vertical, with power supply output on the right.
- The permitted ambient temperatures specified in the technical data must be complied with. If the device overheats, the insulation used to insulate the mains voltage may be damaged.
- The device and its cable may only be operated away from radiant heat and other sources of heat.
- To avoid trapped heat, ensure there is good ventilation on all sides (minimum interval of 20 cm to other objects). Installing the device in recesses or covering the installation location, for example using curtains, is not permitted. Ventilation openings must not be covered.
- If the device is installed in a cabinet, ensure adequate air convection is possible to avoid exceeding the maximum permitted ambient temperature.
- No objects may be placed on the device.
- The subscriber network must be earthed in accordance with EN 60728-11 and must remain earthed even when the device is removed. In addition, the earth connection on the device can be used. Devices within hand's reach must also be integrated into the potential equalisation. Operating the device without an earth conductor, without earthing the device or without equipotential bonding of the device is not permitted.
- The device does not feature protection against water and may therefore only be operated and connected in dry rooms. The device must not be exposed to spraying water, dripping water, condensation or similar sources of moisture.
- The electrical system supplying current to the device, such as a building installation, must incorporate protective devices against excessive currents, earth faults and short-circuits in accordance with EN 62368-1.
- Caution! Hot surface: Housing components near the cooling fins at the rear or the cooling fins themselves may become very hot. Do not touch these parts.
- The power supply plug is used to disconnect the device from the mains voltage for servicing and in the event of danger and must therefore be accessible and in good working condition at all times. The device is operational when connected to the mains voltage.



- Adhere to all applicable national safety regulations and standards.
- Excess mechanical loads (e.g. falling, impacts, vibrations) may damage the insulation used to provide protection from the mains voltage.
- High excess currents (lightning strikes, surges in the power utility grid) may damage the insulation used to provide protection from the mains voltage.
- If there is no information about the intended use (e.g. operating site, ambient conditions), or the operating manual does not include the corresponding information, you must consult the manufacturer of this device to ensure that the device may be installed. If you do not receive the required information from the manufacturer, do not operate the device.
- In rooms in which the climatic conditions vary (e.g. due to sunlight), the device may only be operated if the permissible ambient temperature can be maintained.
- Disconnect devices with a damaged power cable from the mains (unplug the power supply plug).
- Always use the supplied power adapter (power supply unit) and connect it to a power point with a voltage within the range specified in the "Technical data" section. Failure to observe this warning may result in personal injury or equipment/property damage.
- Do not install the device in locations with excessive dust formation, as this may reduce its insulation from the mains voltage.
- According to EN62368-1 a mounting height of ≤ 2 m is mandatory to avoid personal injury.

Electromagnetic compatibility (EMC)

In order to avoid malfunctions when operating radio and telecommunications equipment, as well as other operating units or broadcasting services, the following must be observed:

- Before installation, make certain that you have checked the device for mechanical damage. Do not use damaged or bent covers or housings.
- During operation, the device must always be covered by the components provided for this purpose. It is not permitted to operate the device when the cover is open.

- The braided shielding or the spring contacts must not be damaged or removed.

Maintenance

- The power indicator only shows whether the DC current, which supplies the device components, has been disconnected. However, if power indicators (on the power supply unit or the device) are not lit up, it is in no way an indication that the device is completely disconnected from the mains. There may still be voltage in the device that is dangerous to touch. Therefore, do not open the device.
- Read carefully: EN 60728-11 Safety requirements/No service work during electrical storms!
- Disconnect the mains plug before cleaning the device!

Repair

- Repairs may only be performed by the manufacturer. Improperly performed repairs may result in considerable dangers for the user.
- Do not operate devices with a damaged power cable. You must have the cable repaired by the manufacturer.
- If malfunctions occur, the device must be disconnected from the mains and authorised experts must be consulted. The device may need to be sent to the manufacturer.

General information

- Store or use the device in a safe location, well out of reach of small children. It may contain small parts that can be swallowed or inhaled. Dispose of any small parts that are not needed.
- Plastic bags may have been used for packaging the device. Keep these plastic bags away from babies and children to avoid any danger of suffocation. Plastic bags are not toys.
- Do not store the device near chemicals or in places in which any leakage of chemicals may occur. In particular, organic solvents or fluids may cause the housing and/or cables to melt or disintegrate, presenting a danger of fire or electric shock. They may also cause device malfunctions.
- Do not connect the supplied mains adapter to any other products.



Warranty conditions

The general terms and conditions of ASTRO Strobel GmbH apply. They can be found in the current catalogue or on the Internet under “www.astro-kom.de”.

Performance description

The HVB 22, HVB 31 and HVB 32 are universal building broadband amplifiers for bidirectional building distribution and broadband communication systems. They are exclusively designed for signal amplification in unidirectional and bidirectional distribution systems in single-family and multi-family dwellings.

In order to use the device properly, you must carefully read the following safety and operating instructions.

The HVB 21 and 43 amplifiers can be flexibly configured for future multimedia cable networks:

- Adaptation of local level conditions using the adjustable built-in attenuator and equaliser in the input
- Pre-equalisation of the outgoing cable lines is possible using the interstage slope

***HINWEIS:** The gain values given in the “Technical data” section apply when two setting elements (input equaliser and interstage slope) are used.*

Disposal

All of our packaging materials (cardboard boxes, inserts, plastic film and bags) are completely recyclable.

After use, this device must be disposed of in an orderly manner as electronic scrap, in accordance with the current disposal regulations of your district/country/state.

ASTRO Strobel is a member of the Elektro system solution for the disposal of packaging materials. Our contract number is 80395.



Installation

You can install the amplifier either using wall plugs in a masonry wall or on a perforated or wooden panel using wood screws or sheet metal screws.

The following describes how to fix the amplifier to a masonry wall:

VORBEREITUNG:

Drill two holes in a vertical masonry wall and insert the supplied wall plugs into the holes.

The required distance between the two boreholes is 100 mm.

The following describes how to install the device:

AUFGABE

1. Place the back of the device against the installation surface so that its drill holes are exactly above the two wall plugs. The device inputs and outputs must point downwards.
2. Screw the device into place using the supplied screws (drill holes [4] in the device, see left).

ERGEBNIS:

The module is now installed and can be connected.

The following describes how to install the amplifier on a perforated or wooden panel:

VORBEREITUNG:

Drill two holes in a wooden panel or use the existing boreholes in a perforated plate.

The required distance is 130 mm.

The following describes how to install the device:

AUFGABE

1. Place the device on the installation surface so that the lugs on the outside of the housing are exactly over the boreholes in the panel. The device inputs and outputs must point downwards.
2. Screw the device in place using wood screws or sheet metal screws (drill holes [5] in the device, see left).

ERGEBNIS:

The module is now installed and can be connected.



Connection and start-up

VORBEREITUNG:

To connect the amplifier to coaxial cables, you must first fit them with F connectors 75 Ohm. F connectors are available in various designs, so that direct connection of different cable diameters is possible.


The following describes how to connect the amplifier and coaxial cables:

AUFGABE

1. Plug the F connectors into the corresponding sockets of the amplifier (input [6] and output [5]) and screw the outer ring of the F connector tight.
2. Make sure the coaxial cables are laid with a sufficient bending radius.
3. Connect the device to the mains voltage by inserting the mains plug.

ERGEBNIS:

The device is now ready for operation. The power indicator lights up.

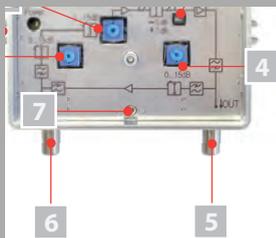

Configuration

The device is delivered with all attenuators in the forward and return paths screwed in. To operate the amplifier, they must be set according to the requirements of the cable network.

- The jumper for setting the interstage slope is set to 0 dB

ACHTUNG: *The device is delivered with all attenuators screwed in to avoid a possible network malfunction or the destruction of the device during operation. **This setting must not be changed in networks that do not use a return path!***

First configure the amplifier for the transmission of forward signals:

AUFGABE

1. Remove the housing cover by loosening the cover screw.
2. When the devices are delivered, the HVB 22, HVB 31 and HVB 32 amplifiers have an attenuator (0...20 dB) [1] and a tilt equaliser (0...18 dB) [2] (see left) in the input, which are screwed in. They can be used to set the desired attenuation and equalisation. (Input and output are protected against overvoltage.)
3. You can also set a pre-equalisation of 0 or 7 dB between the amplifier stages by inserting the jumper [3] accordingly.

ACHTUNG: *The maximum operating level must not be exceeded! (maximum input level = output level minus the set gain for 1006 MHz)*

ERGEBNIS:

The device is now configured for the transmission of forward signals.

To transmit return signals, the amplifier must be configured accordingly.

The following describes how to configure the amplifier for the transmission of return signals:




AUFGABE

1. When the device is delivered, the attenuator (0...20 dB) [5] is screwed in and must be set according to the cable network specifications.

ERGEBNIS:

The device is now configured for the transmission of return signals.

ACHTUNG: *The device is delivered with the attenuator in the return path input screwed in to avoid a possible network malfunction or the destruction of the device upon being connected. This setting must not be changed in networks that do not use a return path!*

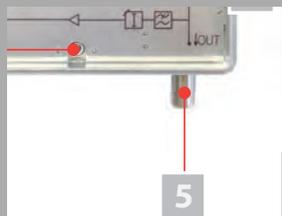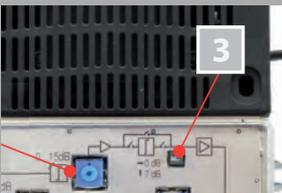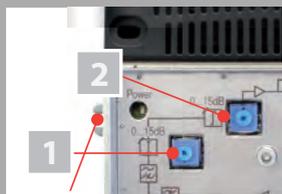

Troubleshooting

If the device is not functioning correctly, perform the following checks:

- Check whether the device is connected to the required mains voltage (230 V~, 50 Hz).
- Check whether the coaxial cables are connected correctly and make sure there are no breaks or short circuits in the connectors.
- Check whether the output level on the device is within the permissible limits for the operating level.

If the problem cannot be resolved, please contact ASTRO customer service.


Maintenance and repair

ACHTUNG: *It is essential that the following safety information be observed when performing maintenance and repair work. Failure to observe this safety information may result in physical injury due to electrical and thermal dangers!*



- The power indicator only shows whether the DC current, which supplies the device components, has been disconnected from the mains voltage. If the power indicator (for the power supply unit or the device) does not light up, it does not mean that the device has been fully disconnected from the mains voltage. There may still be voltage in the device that is dangerous to touch. Therefore, do not open the device.
- Read carefully: EN 60728-11 Safety requirements: No service work during thunderstorms.
- Disconnect the mains plug before cleaning the device!
- A defective device may only be repaired by the manufacturer to ensure that components with the original specification are used (e.g. power cable, fuse). Improperly performed repairs may result in considerable dangers for the user or installer. If malfunctions occur, the device must therefore be disconnected from the mains and authorised experts must be consulted. The device may need to be sent to the manufacturer.

Block diagram

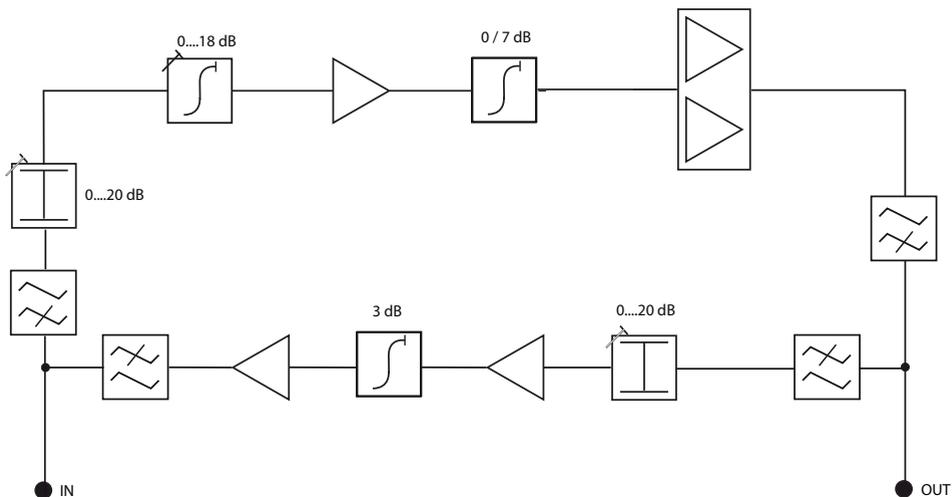

Technical data

Type		HVB 22	HVB 31	HVB 32
Order number		217 369	217 352	217 353
EAN-Code		4026187210731	4026187195397	4026187195885
Forward Path				
Frequency Range	[MHz]	85 - 1006		
Gain	[dB]	25 ± 1	32 ± 1	33 ± 1
Noise Figure	[dB]	≤ 5,5*	≤ 3,5*	≤ 5,5*
Equalizer (Input)	[dB]	0 - 18 (level controller)		
Attenuation (Input)	[dB]	0 - 20 (level controller)		
Slope (Interstage)	[dB]	0 or 7 (pluggable)		
Testpoint at the output	[dB]	20 ± 1 (directional coupling)		
Maximum Output Level				
Acc. EN 60728-3, 112 Ch./8 MHz, 256 QAM, BER < 1E-9 Acc. VFKD 1 TS 140 (Cenelec 41 Ch.)	[dBμV]	97 101	97 97	97 101
Return Path				
Frequency Range	[MHz]	5 - 65		
Gain	[dB]	19...22 ± 1	22...25 ± 1	24...27 ± 1
Slope (Interstage)	[dB]	3 (fixed)		
Noise Figure	[dB]	≤ 6,5**	≤ 6**	≤ 5,7**
Attenuation (Input)	[dB]	0 - 20 (level controller)		
Maximum Output Level				
Acc. VFKD 1 TS 140 Acc. EN 60728-3, 6 Ch./8 MHz, 256 QAM, BER < 1E-9	[dBμV]	medium system load 111		
Common Data				
Power Consumption	[VA] / [W]	10,5 / 7,5	10 / 7	10,5 / 7,5
Impedance	[Ω]	75		
Return loss	[dB]	≥ 14 a. from 40 MHz - 1,5 / octave (at least 10)		
Connectors		F-jacks, 75 Ω		
EMC	[Ω]	accord. EN 50083 -2		
Supply Voltage	[V~/Hz]	230 / 50		
Ambient Temperature	[°C]	-15...+50		
Size (W x H x D)	[mm]	135 x 140 x 49 (including connectors)		
Weight	[kg]	0.8		
Mounting and operation height		< 4000 m over N.N.		
Protection Class		DIN EN 60 529-IP 20		

VFKD classification		B2.1/B.2.2	B3.1	B3.2
---------------------	--	------------	------	------

*) at 85 - 108 MHz with bandwidth conversion; **) measured at 10 MHz



ASTRO Strobel Kommunikationssysteme GmbH

© 2021 ASTRO

Subject to change.

Change management and copyright:

This document contains information protected by copyright. It is prohibited to photocopy, duplicate, translate or store on data storage media this document, either partially or in full, without prior agreement of the ASTRO company.

These operating instructions have been written by:

ASTRO Strobel Kommunikationssysteme GmbH

Olefant 3, D-51427 Bergisch Gladbach (Bensberg) Germany

Phone: +49 2204/405-0, Fax: 02204/405-10

eMail: kontakt@astro-kom.de

Internet: www.astro-kom.de

All the information contained in this document has been checked in good faith.

The ASTRO company cannot be held liable for any damage or injury arising in connection with the use of these operating instructions.